




- ⓖⓔ Outside temp. Sensor (LMS)
- ⓓⓔ Witterungs fähler (LMS)
- ⓃⓁ Buitenvoeler (LMS)
- ⓕⓚ Sonde extérieure (LMS)
- ⓔⓐ Sonda esterna (LMS)

Outside temp. Sensor  
 Witterungs fähler  
 Buitenvoeler  
 Sonde extérieure  
 Sonda esterna

A = 1X






Mounting and dimensions  
 Montage und Abmessungen  
 Montage en afmetingen  
 Montage et dimensions  
 Montaggio e dimensione

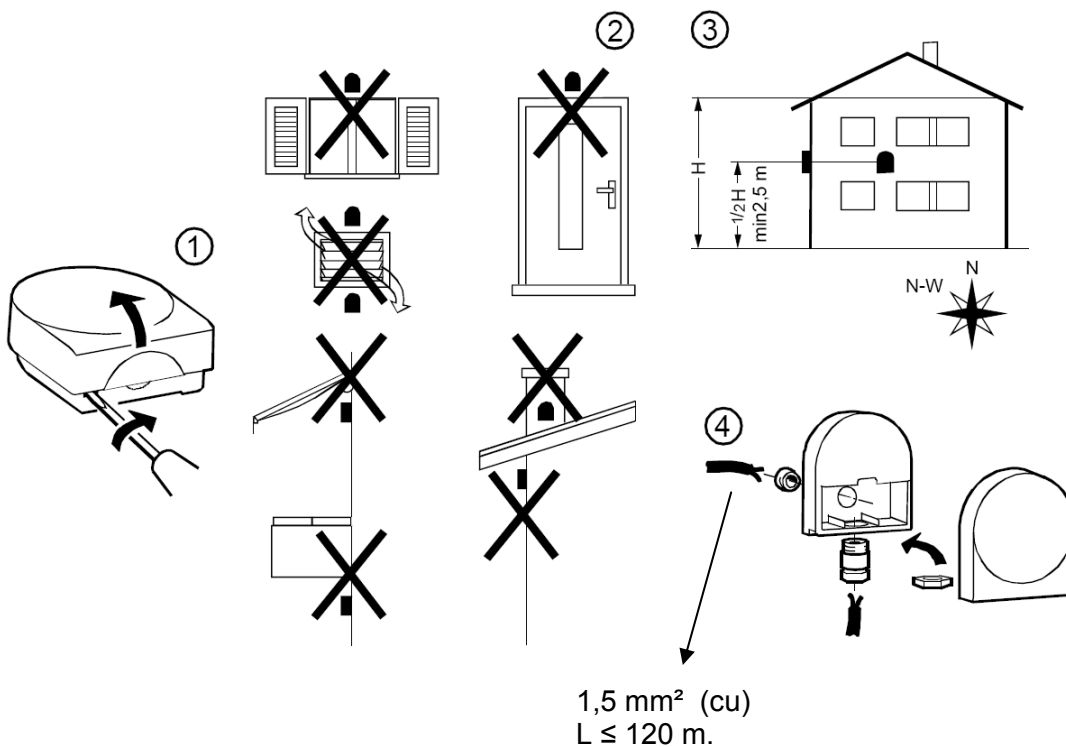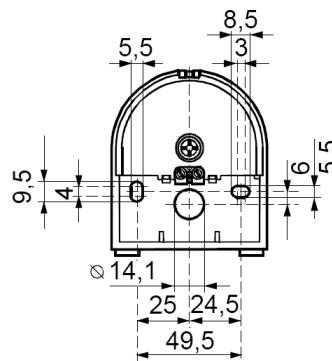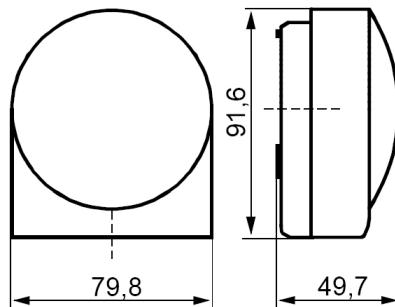

- Ⓒ **GB** Outside temp. Sensor (LMS)
- Ⓒ **DE** Witterungs fühler (LMS)
- Ⓒ **NL** Buitenvoeler (LMS)
- Ⓒ **FR** Sonde extérieure (LMS)
- Ⓒ **IT** Sonda esterna (LMS)

### Thision L




- ! Remove resistor
- ! Widerstand entfernen
- ! Weerstand verwijderen
- ! Retire le résistance
- ! Rimuovere resistore

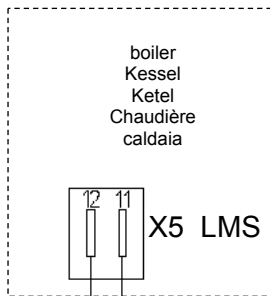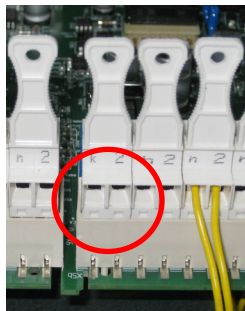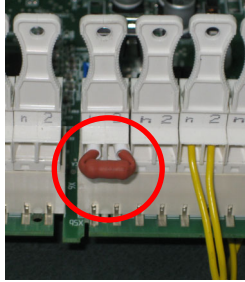

Outside temp. Sensor  
Witterungs fühler  
Buitenvoeler  
Sonde extérieure  
Sonda esterna

### R600 LMS

- ! Remove resistor
- ! Widerstand entfernen
- ! Weerstand verwijderen
- ! Retire le résistance
- ! Rimuovere resistore

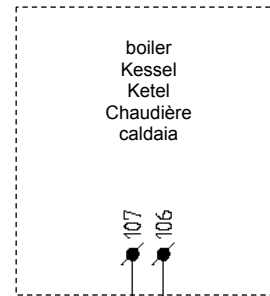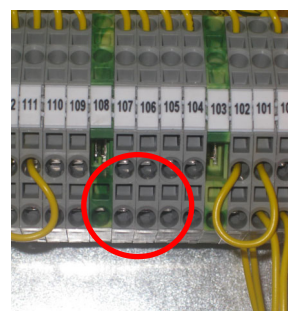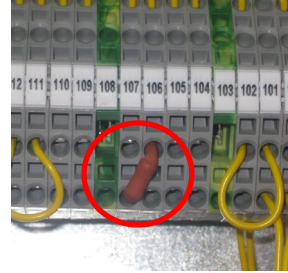

Outside temp. Sensor  
Witterungs fühler  
Buitenvoeler  
Sonde extérieure  
Sonda esterna